


Vehicle Data Logger Installation Instructions

Materials:

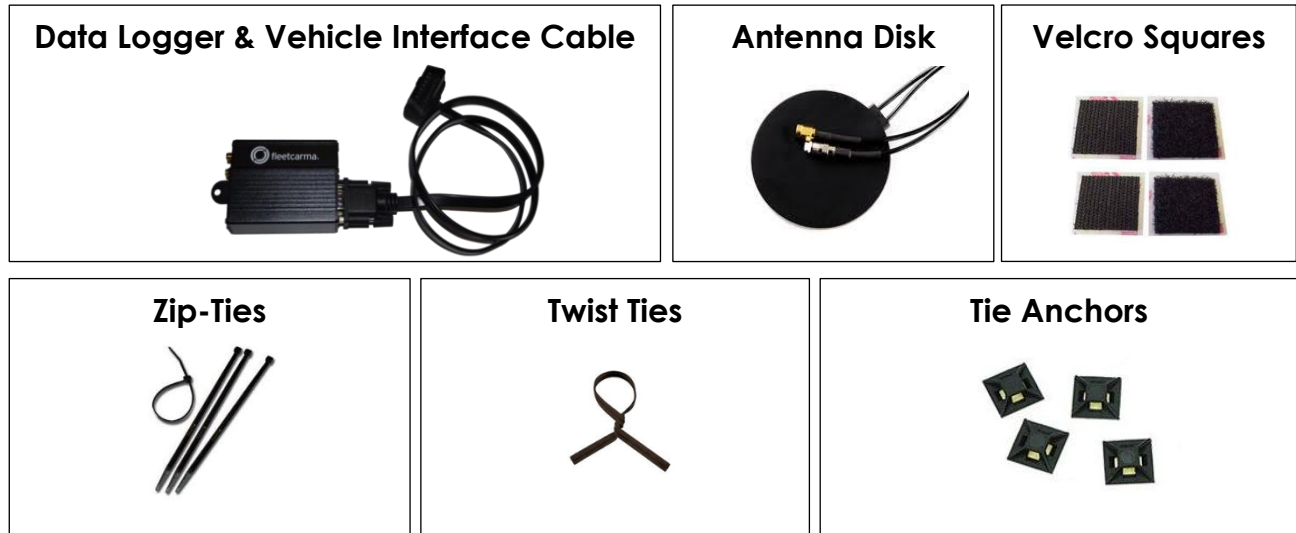

Video Tutorials:

Ask your FleetCarma representative for a video tutorial on vehicle logger installation. Below are some instructions if you have not seen a video tutorial.

Step 1: PREPARE THE LOGGER UNIT AND MODEM

1. Ensure that a SIM card is installed in the SIM slot shown below. If the SIM is not pre-installed be sure to insert it fully until you hear a distinct “click”. When properly installed the front edge of the SIM will be flush or slightly behind the black cover plate. A pen or small object can come in handy when inserting the SIM. To remove simply push the SIM one more time and it will eject.



2. Ensure the SD Card is fully inserted.



3. Connect the **Vehicle Interface Cable** to the 9-Pin DSUB port on the logger labelled "**Vehicle Interface.**" Be sure to tighten the thumb screws securely.



4. Screw in the **GSM connector** and **GPS connector** from antenna disk to modem.




5. Ensure that the vehicle is OFF.




Step 2: INSTALL AND TEST THE LOGGER UNIT IN THE VEHICLE

6. Plug the vehicle interface cable into the vehicle's OBD-II connector. The data logger does not need to be mounted or hidden at this time. If you are unsure where your OBD2 port is located visit the following link for reference:

http://www.carmd.com/70.6/Article/Find_My_Cars_Connector

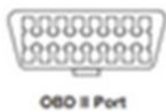7. Start the vehicle and confirm that the blue and green LEDs are flashing. The LEDs will continue to flash once the vehicle has been turned off until all communication has stopped and the data has been uploaded.



-  The green LED indicates that the logger is on
-  The blue LED indicates that the logger is receiving data from the vehicle or transmitting data wirelessly
-  A red LED indicates an error.
(Often the micro SD card has become ejected)

8. If you receive a RED LED double check the SD card is fully inserted. If the problem persists contact FleetCarma.

Step 3: FINALIZE THE INSTALLATION

9. Tuck away the data logger underneath the dashboard (there is usually an opening under the dash to mount the logger). Often there is a pocket towards the far left of the driver's foot well that serves as a good location but this will vary from vehicle to vehicle.
10. Run the antenna wires along the side of the dash and mount the antenna puck on the vehicle windshield close to the dash (away from the driver's sight).
11. Secure all loose cables using the zip-ties and twist ties if required (recommended).

Step 4: SEND YOUR UPDATED VEHICLE LIST TO FLEETCARMA SUPPORT TEAM

12. Note down the C5 Logger ID and the associated vehicle for each vehicle installation and email the summary to support@fleetcarma.com . Once FleetCarma receives this information the specific configuration for your vehicle will be uploaded to the device "over-the-air."

Only one of the following is required			Required	Required
VIN	LICENSE PLATE	VEHICLE ID	Existing Year/Make/Mode	C5 LOGGER ID
XXXXXXXXXXXXXXXXXX	BAWV 318	(EG. UNIT 122432)	2013 CHEVROLET VOLT	F42XXC

If you have any questions, please contact FleetCarma support at: **1.800.975.2434** or **contact@fleetcarma.com**

Or visit our company website at **www.fleetcarma.com**